



User Manual

APARTMENT HOUSE INTERCOM (ROOMSTATION) DP-SS




www.commax.com

COMMAX Co.,Ltd



- · Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

1. CONTROLS AND FUNCTIONS

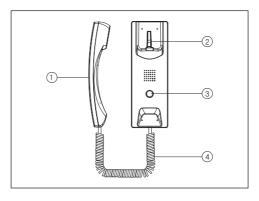


- ① HANDSET
- 2 HOOK S/W
- ③ DOOR RELEASE BUTTON
- **4** SPRING CORD

2. OPERATION INSTRUCTION

- 1. Hear a call sound from receiver ① When visitor press the call button on the doorstation
- 2. Converse with visitor after raise up handset
- 3. After ascertain the visitor, press the door release button ③ to open door


NOTE: No need to connect extra power by reason of it's supplied power source from doorstation

3. WIRING DIAGRAM

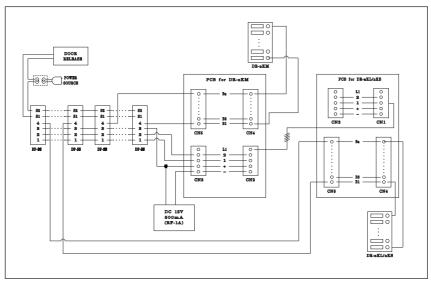

4. INSTALLATION

- 1) Please attach a bracket on the wal correctly with screw.
- 2) After the attachment of bracket, please Adjust the groove of the product with a Bracket and then pull it down.

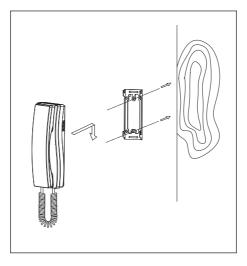



COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea Int'l Business Dept.: Tel.; +82-31-7393-540-550 Fax.; +82-31-745-2133 Web site: www.commax.com